SMC CT Series Cloud Terminal RDP Protocol Guide

1 Enter settings interface

First, click this button in the left corner to enter the settings interface.

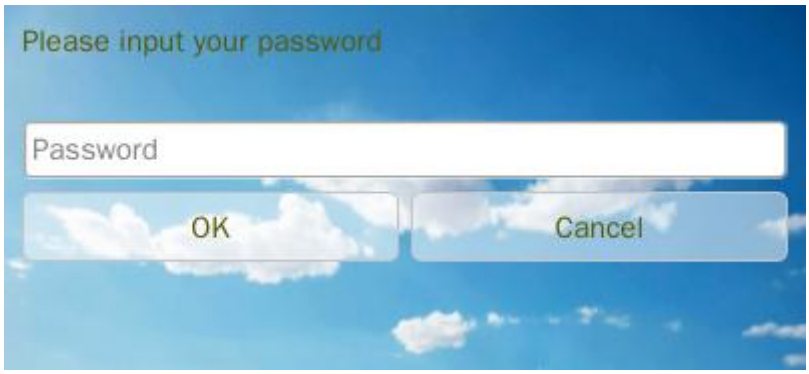

When the system needs password to access system settings, you can click settings button , then above interface will pop up, correct password is needed to access settings interface (The initial setting password is “123”) .



2 Set Network

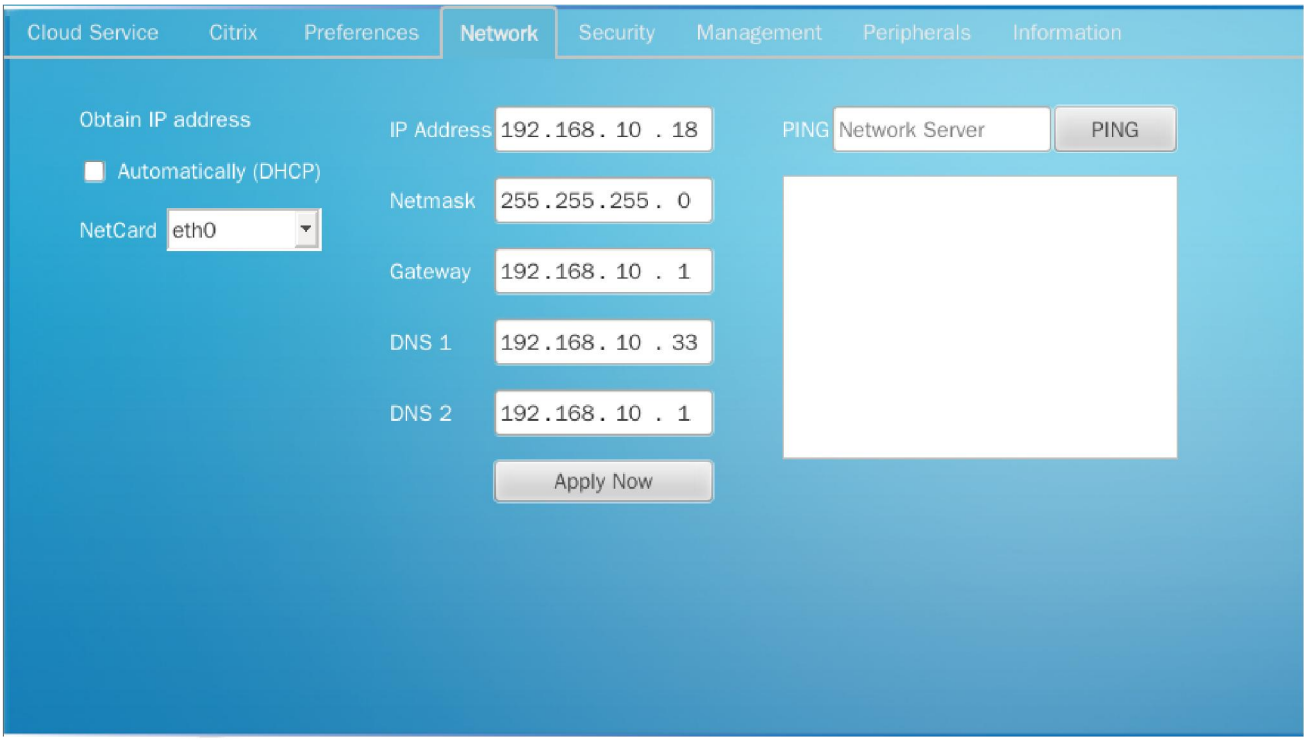

- Auto settings：If choose , the terminal will get setting IP etc. automatically.
- Manual settings：If not choose , you can set network chip settings, IP settings manually according to requirements.
- Ping tools： type Network Server ofPing，click  ，then results of Ping will be displayed under the column box.
- Please click  after settings, new settings will take effect instantly.

3 Select RDP Connection

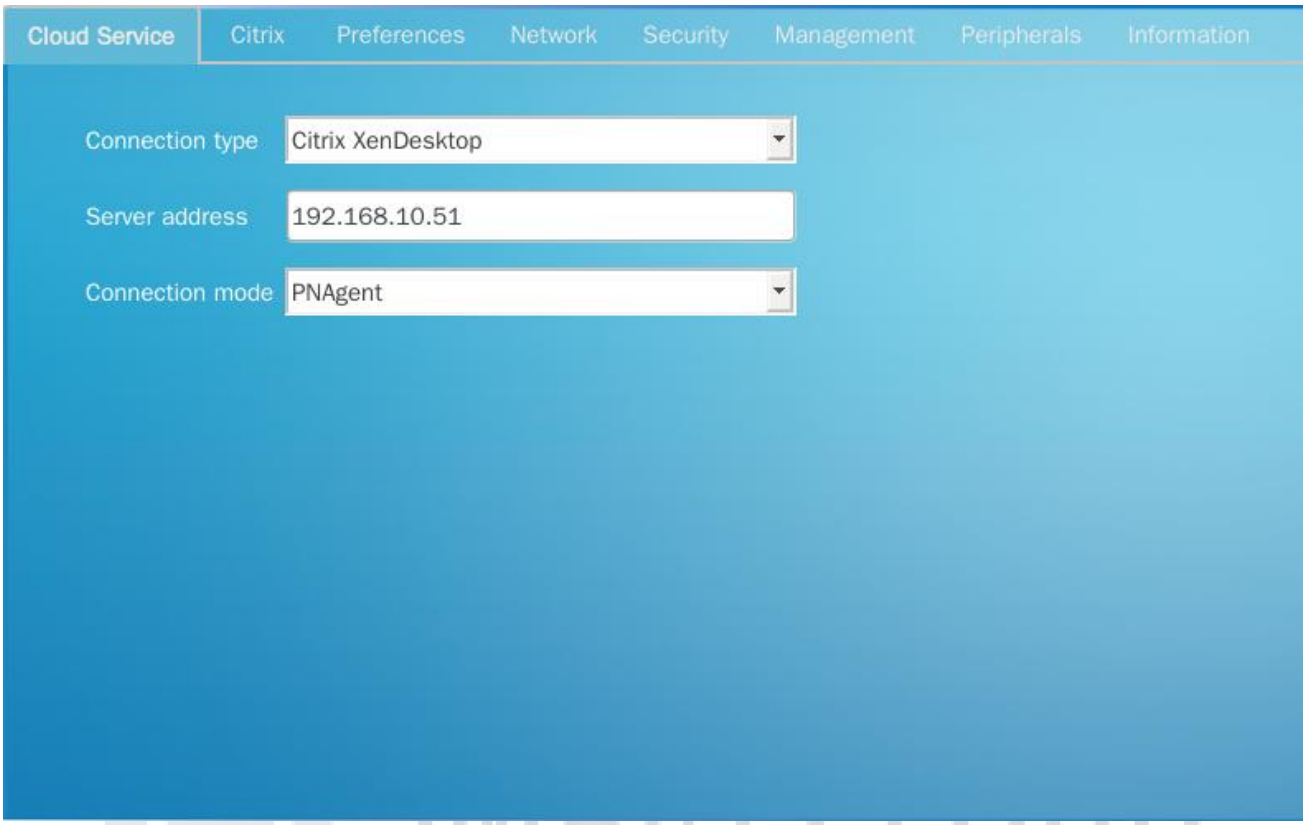

Choose cloud computing service type Microsoft RemoteFX.

You can choose "RemoteFX" protocol under cloud computing to connect server, input server address or domain in Server Address. Connectivity property can be set in " RemoteFX" interface according to requirements.

- **Display & Programs**

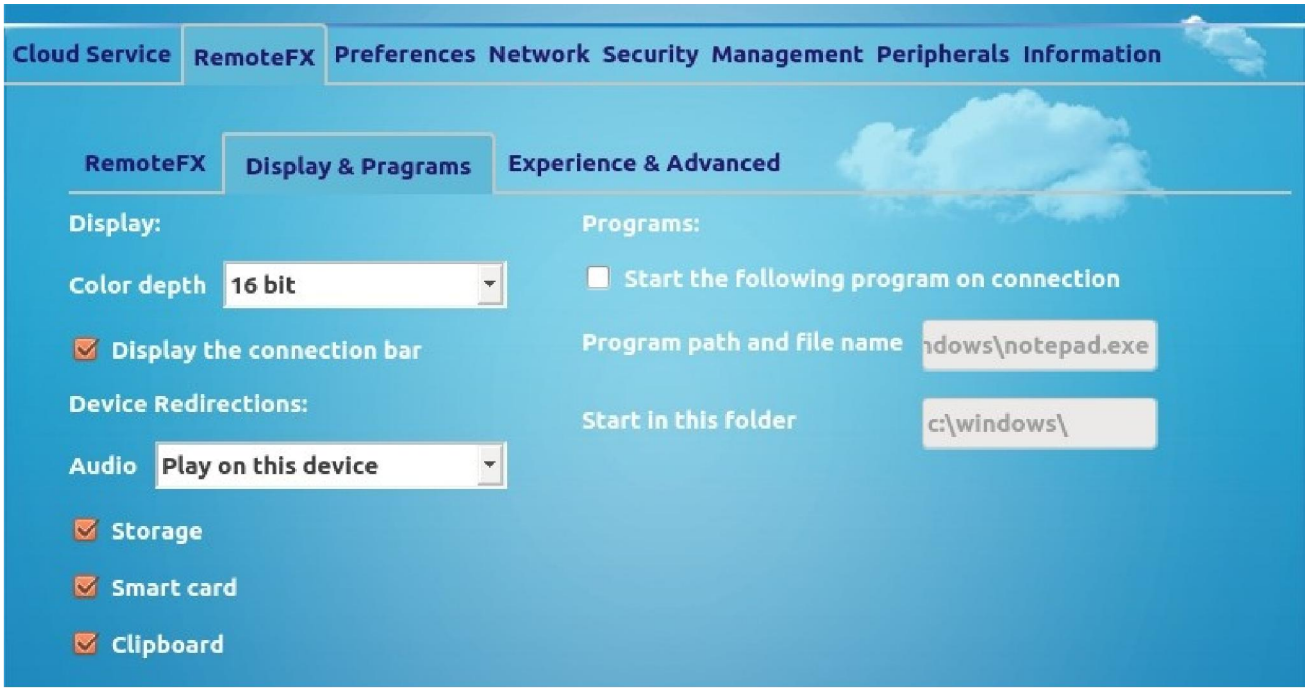

Choose Audio→"Play on this device"

4 Choose Redirection Policy

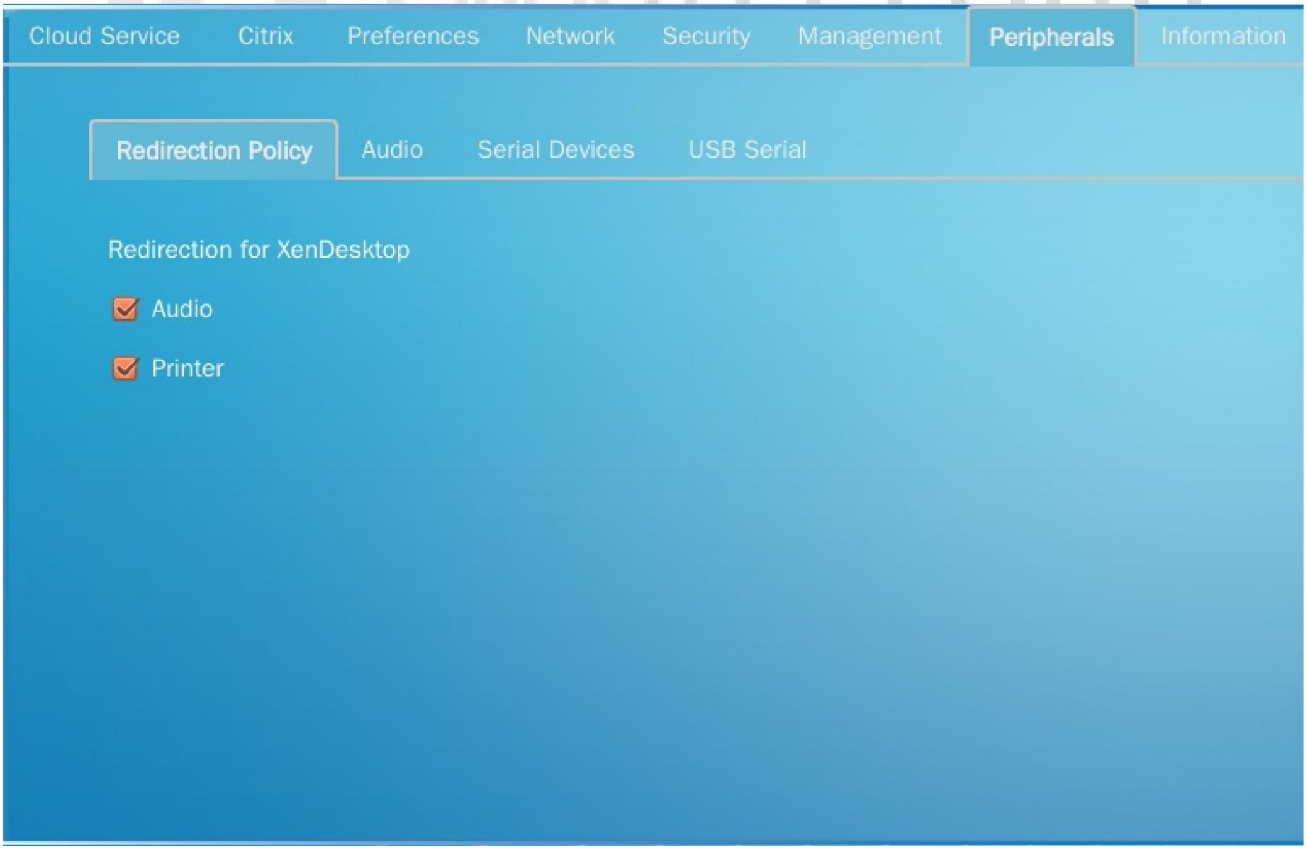

Choose Audio

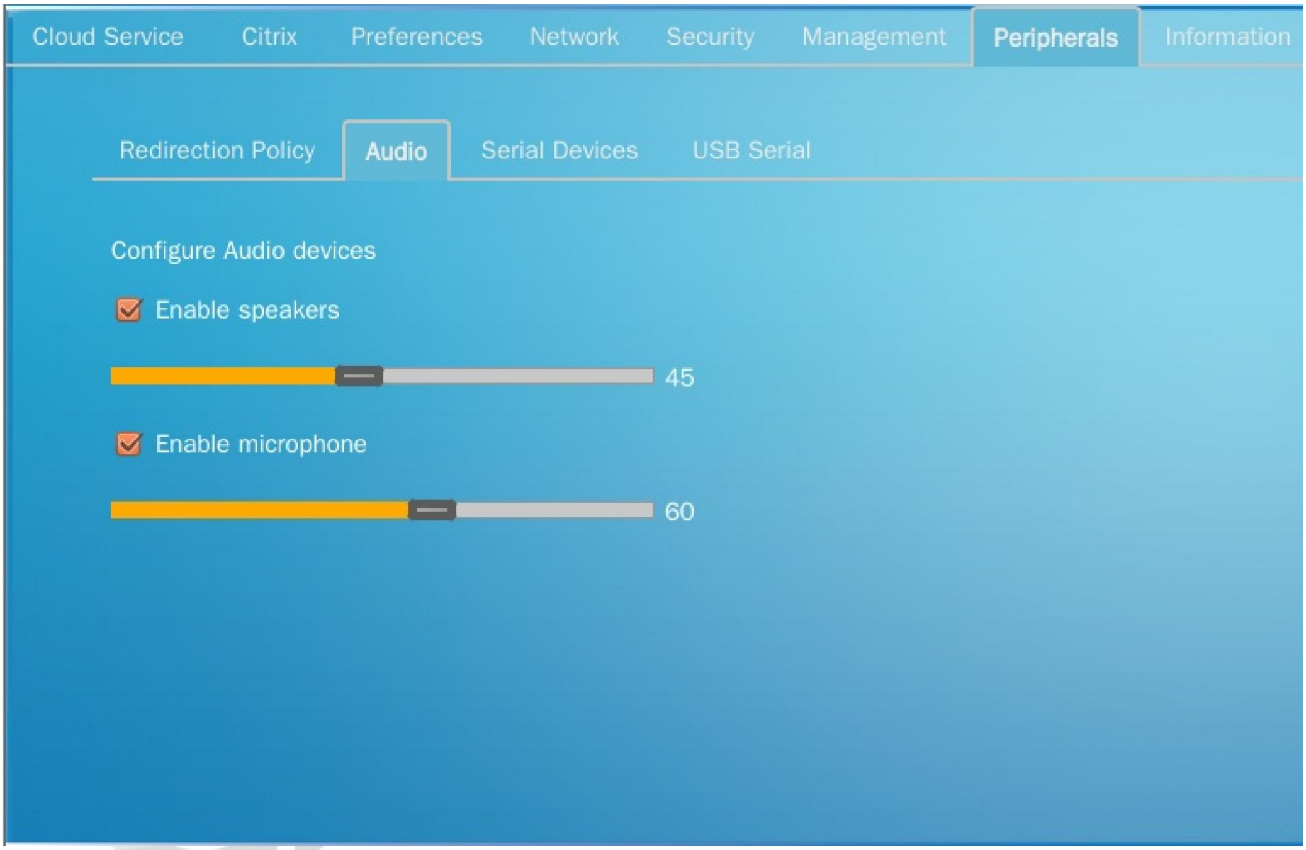

- Enable speakers : Choose

which means sound is allowed to upload, volume can be set by dragging the rolling bar.
- Enable microphone : Choose

which means sound is allowed to download, volume can be set by dragging the rolling bar.

5 RemoteFX connect

SMART CLOUD